



**HMA PATCHES**

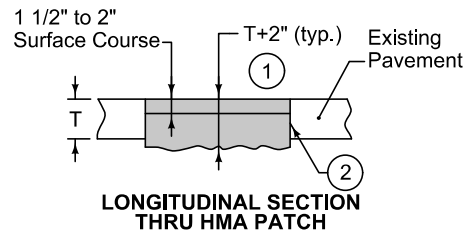

- ① If subgrade or subbase material is required below patch, bring material to bottom of pavement.
- ② When removing pavement, saw to full depth or 10 inches, whichever is less.

	REVISION 1   10-16-12
	<b>SUDAS</b> <b>7040.103</b>
	SHEET 1 of 1
SUDAS Standard Specifications	
FULL DEPTH HMA PATCHES	