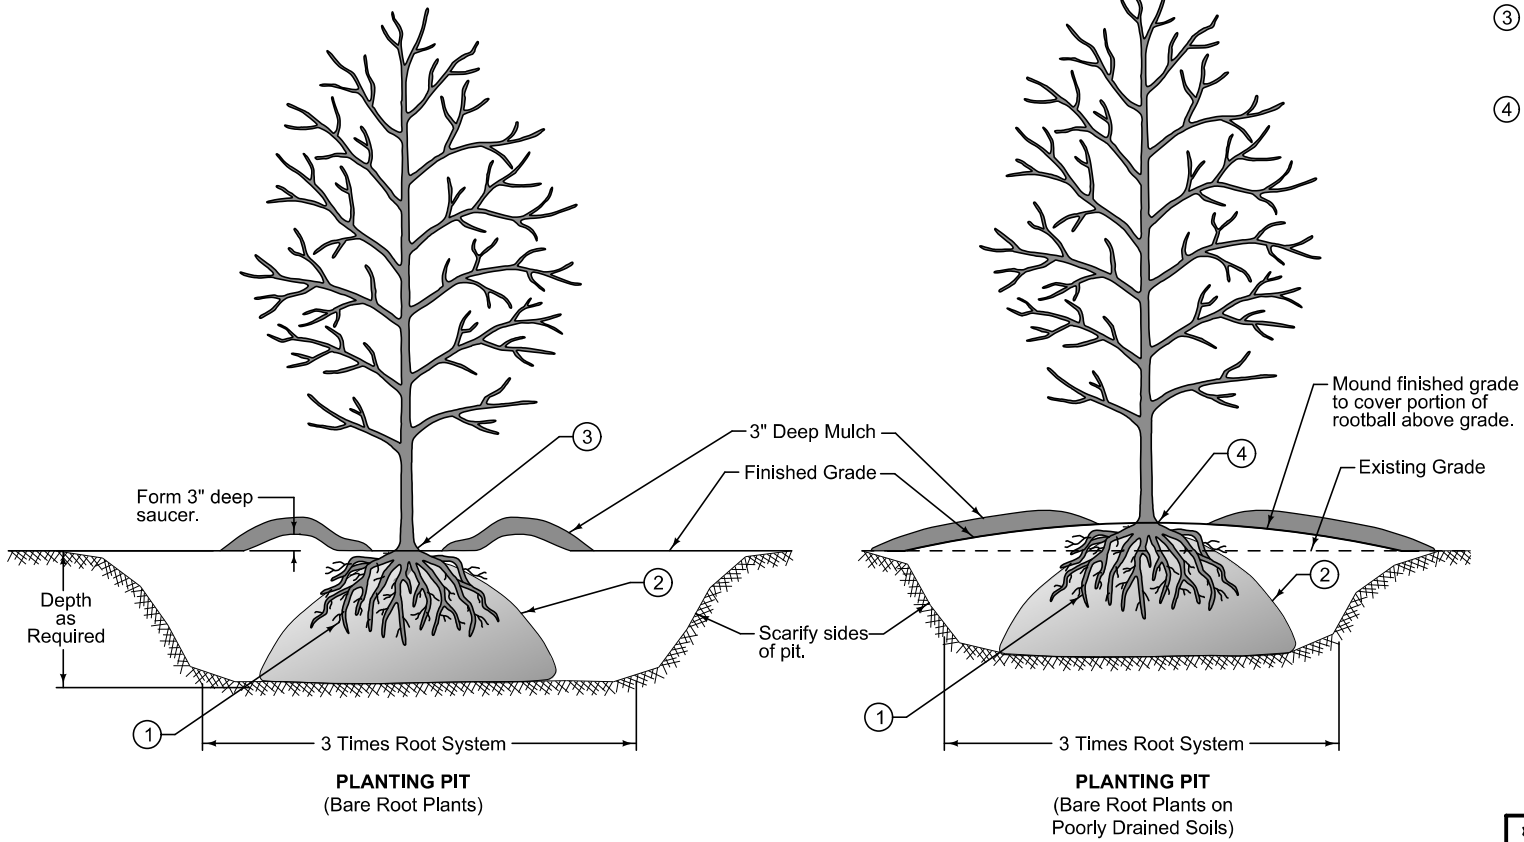

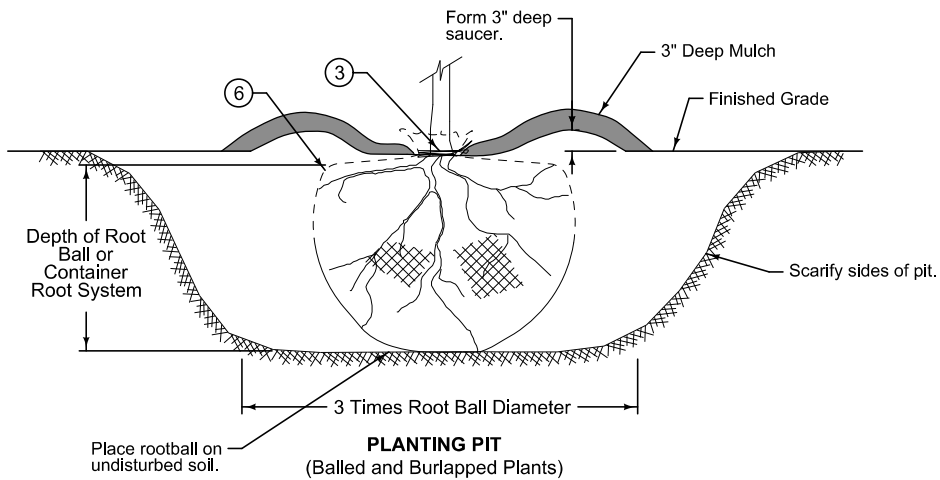


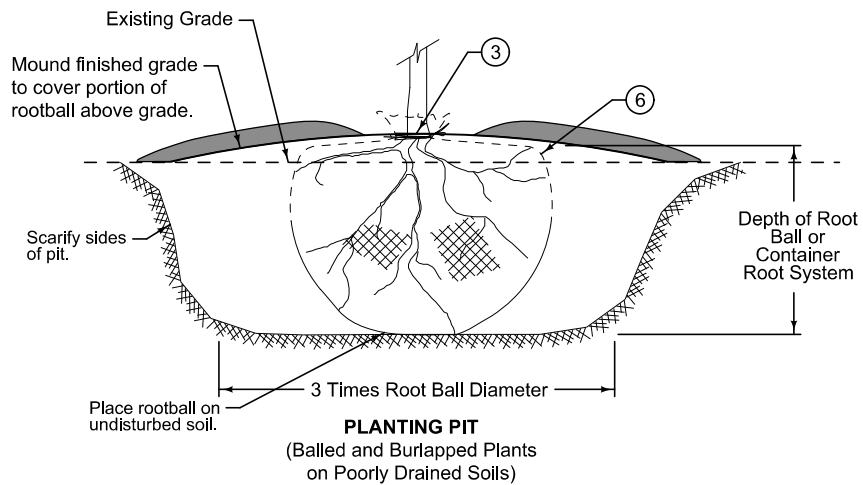
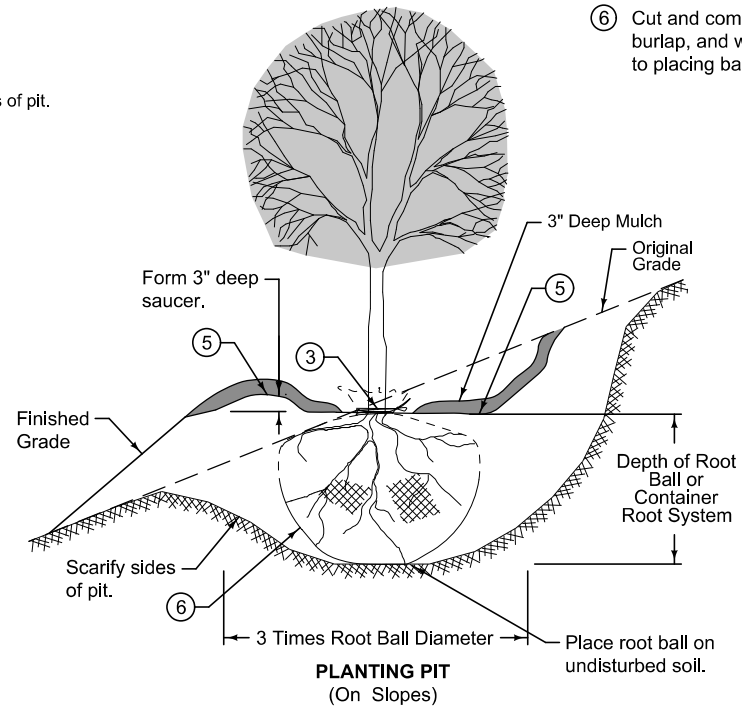
- ① Spread root system in natural position with soil excavated from pit.
- ② Build a firm cone-shaped mound of soil in the middle of the planting pit.
- ③ Install with root flare at or slightly above grade. Do not place mulch within 6 inches of trunk.
- ④ Install root flare 2 to 3 inches above grade. Do not place mulch within 6 inches of trunk.



	REVISION 1 2022 Edition	
	SUDAS 9030.101	
	SHEET 1 of 2	
SUDAS Standard Specifications		
PLANTING PIT		



- ③ Install with root flare at or slightly above grade. Do not place mulch within 6 inches of trunk.
- ④ Install root flare 2 to 3 inches above grade. Do not place mulch within 6 inches of trunk.
- ⑤ Begin transition at edge of root ball.
- ⑥ Cut and completely remove top 1/2 of twine, burlap, and wire baskets from root ball prior to placing backfill material.



	REVISION	
	1	2022 Edition
	9030.101	
SHEET 2 of 2		

SUDAS Standard Specifications

PLANTING PIT